

s[P20] - Procedure for APF update and circuit board replacement

What do you need to do?


- APF update (recommended in the vast majority of cases):
Updating the software is necessary not to lose data such as operating hours, choice of operating mode, programming, error messages, etc.
- Circuit board replacement:
The printed circuit board should only be replaced in the event of damage caused by overvoltage or other external causes. The new blank board will need the apf update after placement.

What procedure should I follow?

The procedure requires a USB key on which to load the files. Please follow the instructions below

[Discover the procedure](#)

Which version of the P20 do you have?

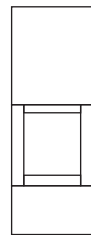

sP20-S


Optional black remote control (P20S-001-137)

APF update

[Download file](#)

Circuit board replacing

[Download file](#)

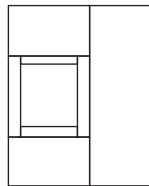

sP20-B

Optional black remote control (P20B-001-137)

APF update

[Download file](#)

Circuit board replacing

[Download file](#)