Installation instructions

For professional use

EN

www.stuv.com
You can also find us on:



stûv 22

Front panel DS

January 2019
93109081

This cladding has been designed to ensure maximum convenience and safety. It has been manufactured with the greatest of care. If however you should find the slightest dissatisfaction with it, please contact your supplier.

We recommend that you read these instructions prior to installation.

Some configurations might have an impact on the sequence of operations to be performed.

Contents

GENERAL INFORMATION	**3**
Recommendations	3
Removing the door	4
INSTALLATION	**5**
Dimensions of the DS front panel	5
Recess dimensions	5
Recess dimensions	6
Height of the stove	6
Positioning templates	6
Screws required	7
Installation	7
MAINTENANCE	**12**
CONTACTS	**15**

Recommendations

Read the installation instructions and directions for use before installation and actual usage.

Also adhere to your stove's directions for use.

This Stûv cladding should be installed by a professional who has received the appropriate training from the Stûv manufacturer or one of its importers.

Once the cladding has been installed, hand these instructions over to the user.


Signing the delivery forms signifies that you accept the product and acknowledge that the merchandise is compliant with the merchandise ordered. It is therefore very important to check the integrity of the merchandise on delivery.


Adhere to the maintenance guidelines.

Any change made to the cladding may be dangerous. Please follow the specific instructions.

The installation of the stove, its accessories and the materials which surround it must comply with all regulations (local and national) and all standards (national and European) for the country of installation.

Removing the door

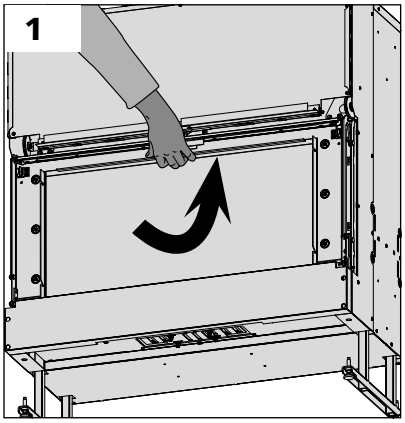


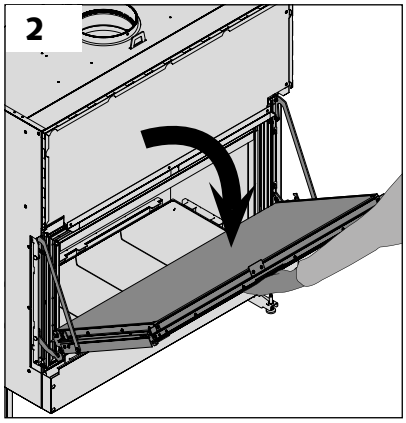



All Stûv 22 finishes are installed on the stove, just behind the door. The first stage is therefore the removal of the door.


To make it easy to move the Stûv 22, we recommend that the device's door is uncoupled.
By doing this, you will lighten the weight of the device and avoid any damage to the glass.


We recommend putting 2 screws in the strut of the door to make it easier to move [diagram 4].

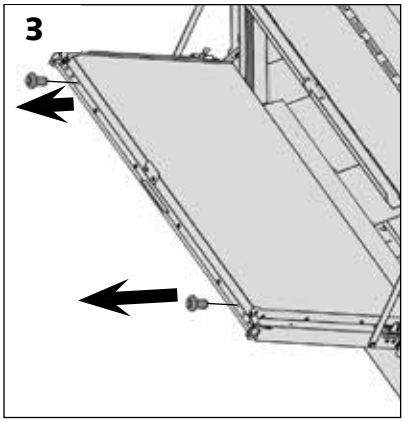

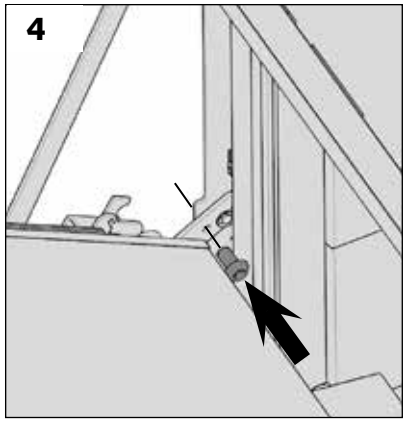


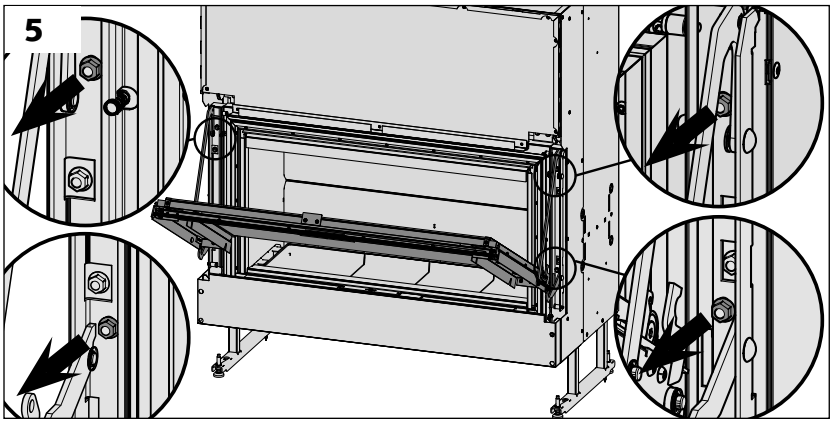

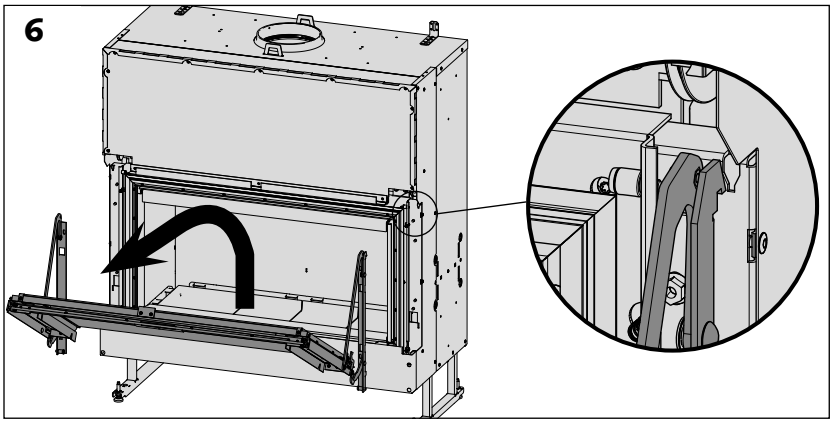

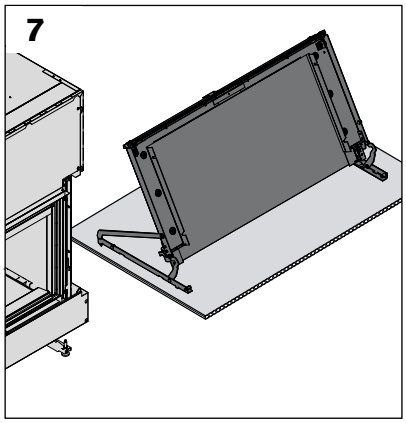


Dimensions of the DS front panel

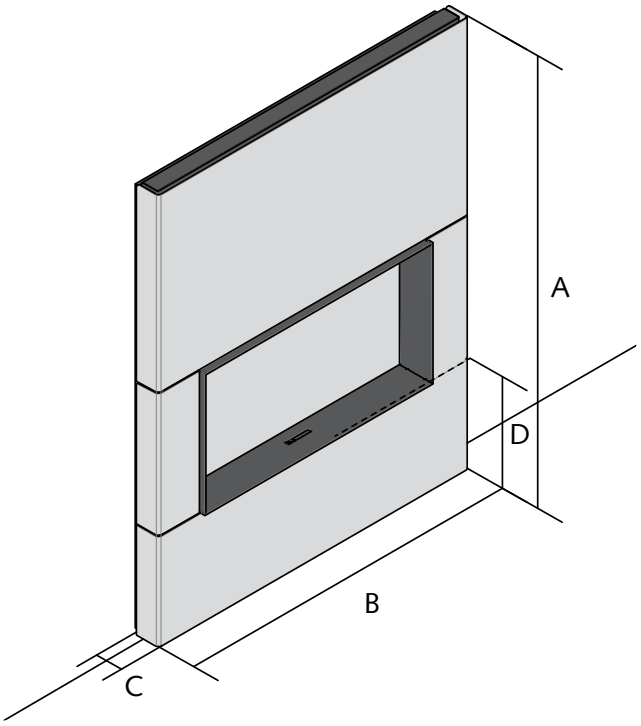

	22/70	22/90	22/110
A	1770	1630	1530
B	795	995	1195
C	115	115	115
D	400	400	400


	22/90 DF	22/110 DF
A	1605	1505
B	995	1195
C	115	115
D	265	265

Recess dimensions

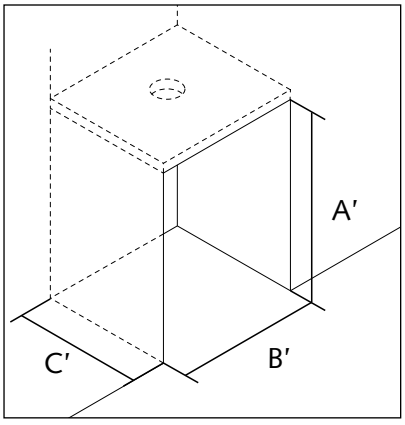

	A′	B′	C′
22/70	1710	730	460
22/90	1570	930	460
22/110	1470	1130	460


	A′	B′	C′
22/90	1545	930	/
22/110	1445	1130	/

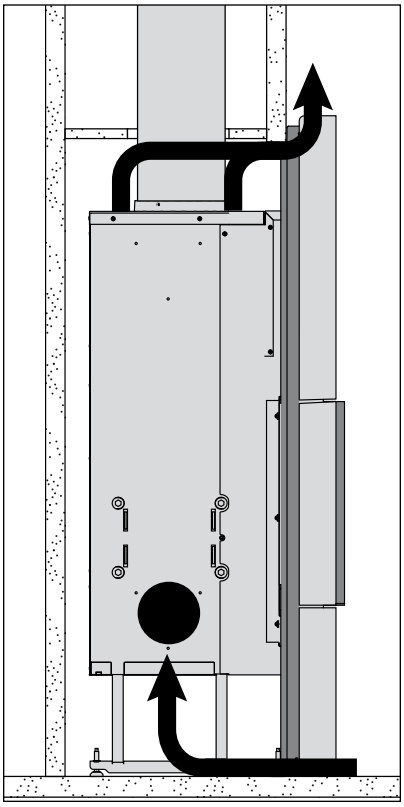

It is advisable to provide a false-ceiling in noncombustible material in order to avoid any heat trap in the appliance recess.

Recess dimensions


8

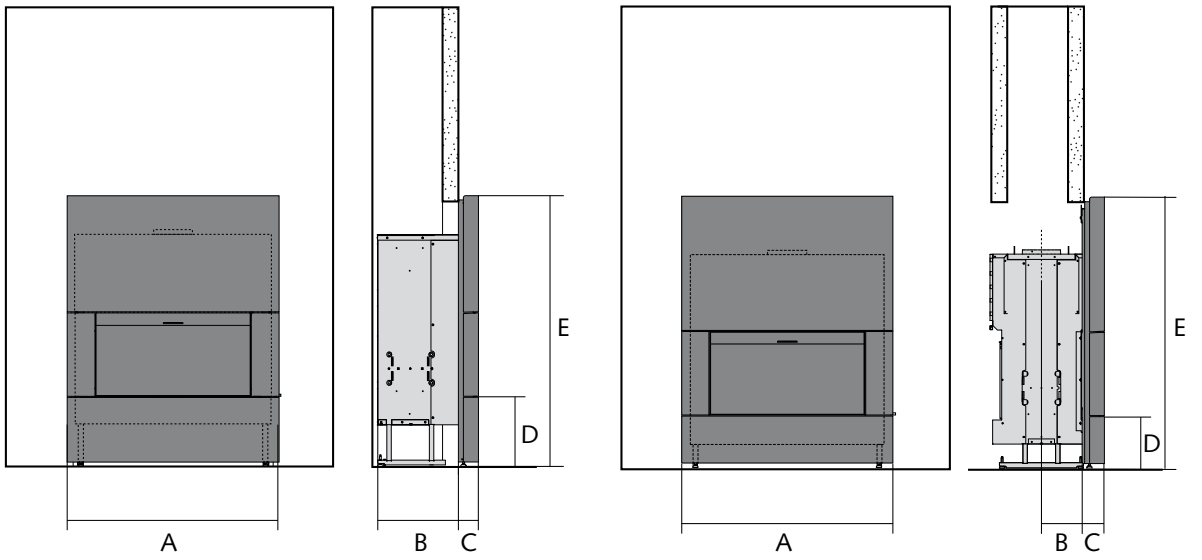


	A	B	C	D	E
Stûv 22/70	795	460	115	400	1770
Stûv 22/90	995	460	115	400	1630
Stûv 22/110	1195	460	115	400	1530


	A	B	C	D	E
Stûv 22/90 DF	995	232	115	265	1605
Stûv 22/110 DF	1195	232	115	265	1505


Height of the stove

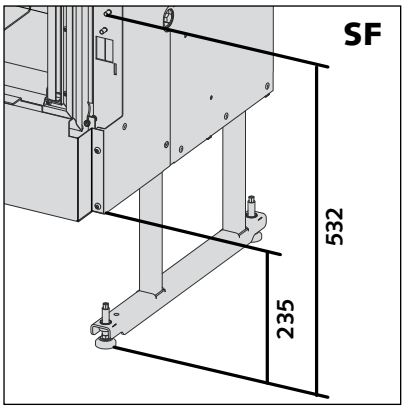

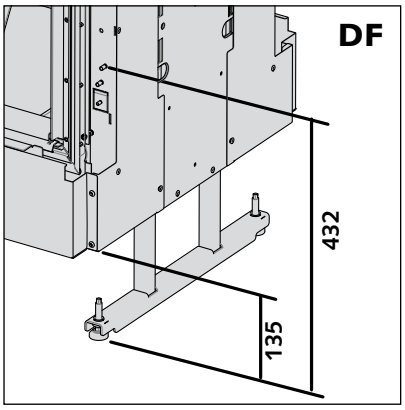

Positioning templates

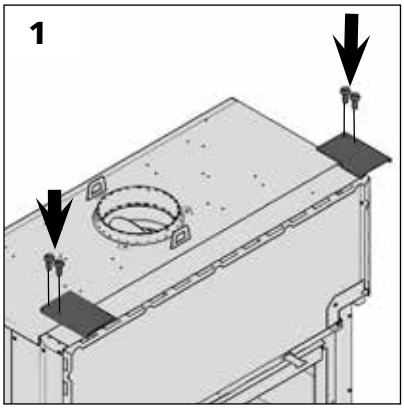

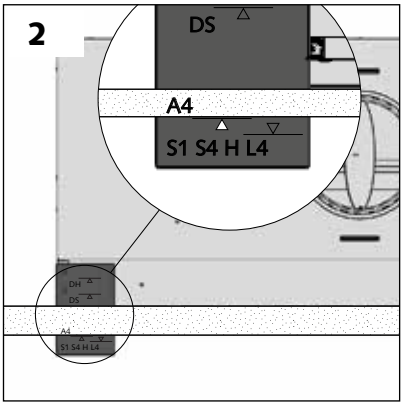


You can use the positioning templates to determine the position of the partition in relation to the stove depending on the cladding chosen.

> Put the templates on the stove with the Taptite screws provided [diagram 1].

> Line up the stove.


> **Position the stove so that the partition is lined up with the mark, with the triangle visible [diagram 2].**

Screws required




B
X 18

M5 hexagonal nut grooved washer
52113021



G
X 2

Adjustable base
52120002




E
X 19

Torx screw M5X10
52123012


+ F

This hardware depends on your choice of material and therefore is not provided with the panel.



C
X 4

M6 hexagonal nut grooved washer
52113022
*Supplied with the stove



H
X 4


M6 hex bolt
52997019





D
X 5


Torx screw M5X8
52123004


Installation

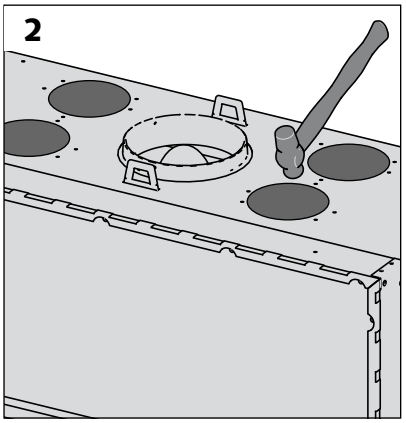

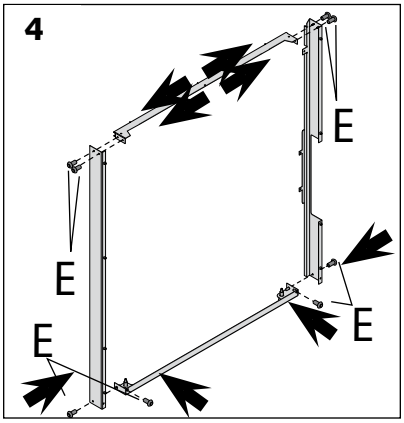


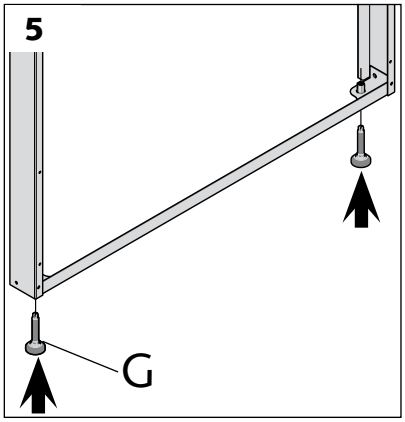


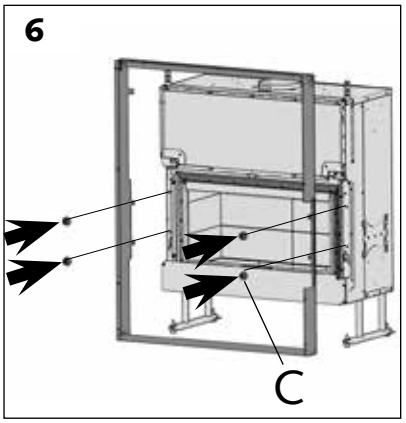


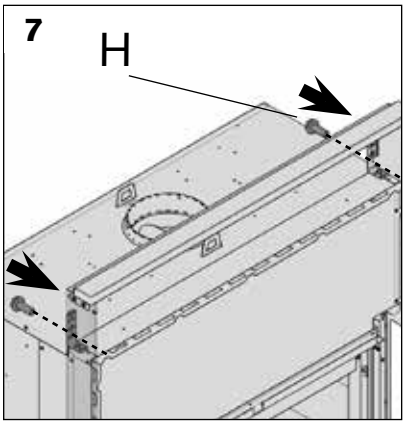


> Fix the trim panel frame to the wall [figure 8].
The screws and fastenings for this stage are not supplied with the front panel.
Please use the hardware which matches your type of construction.

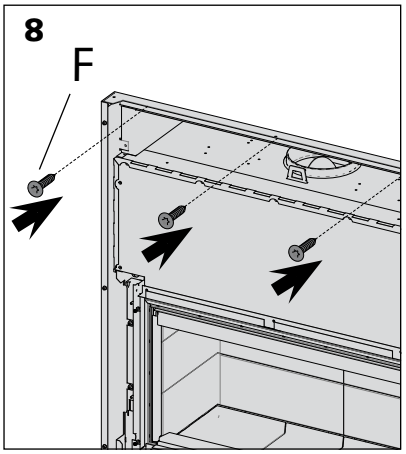

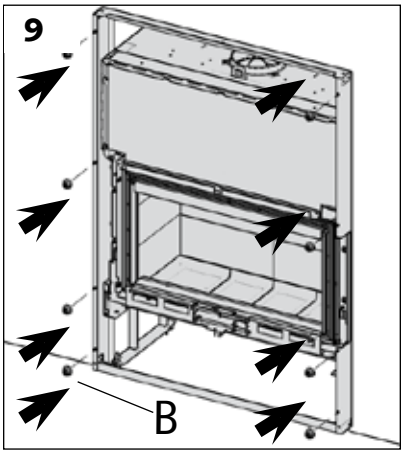


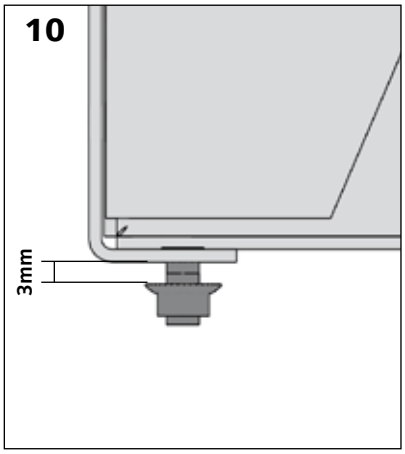


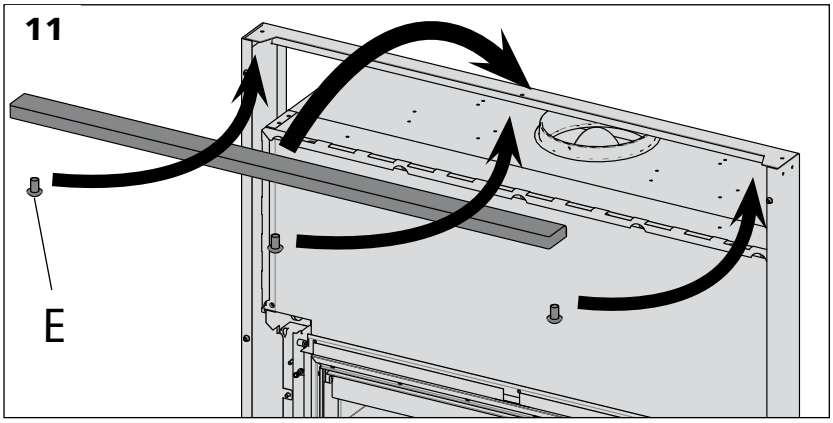



> Once the top and bottom trim panels are installed, please tighten the various nuts using an 8mm wrench.


> Replace the door of the Stûv 22

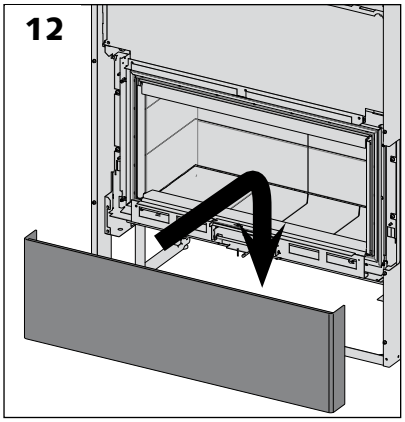


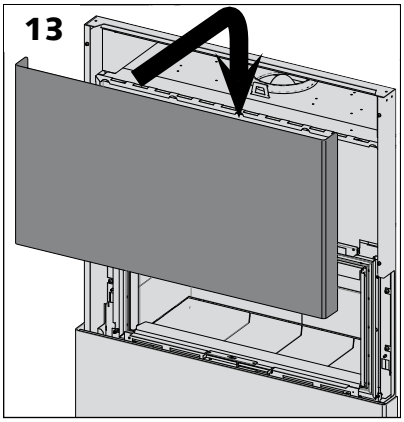


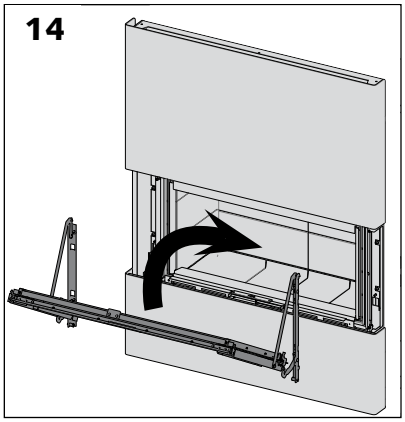


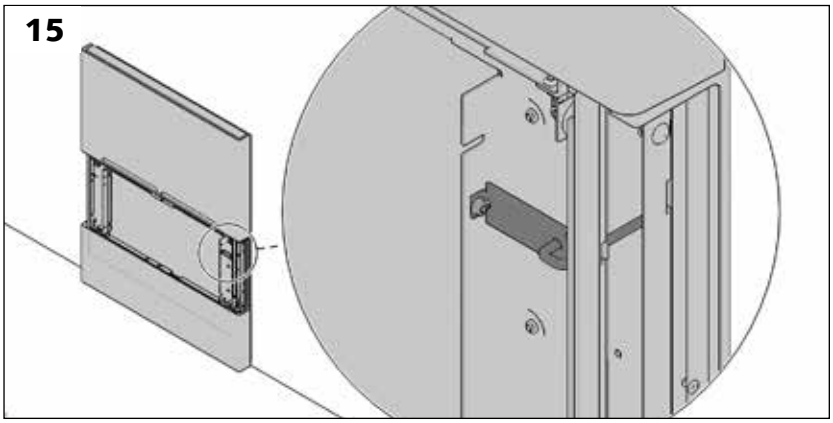


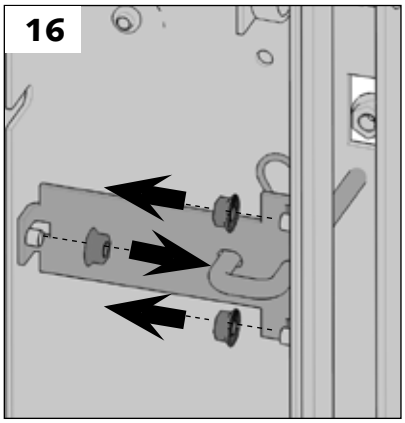


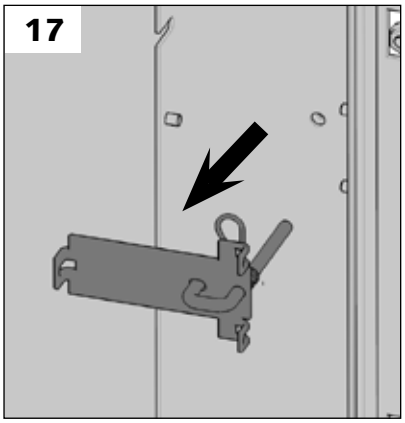


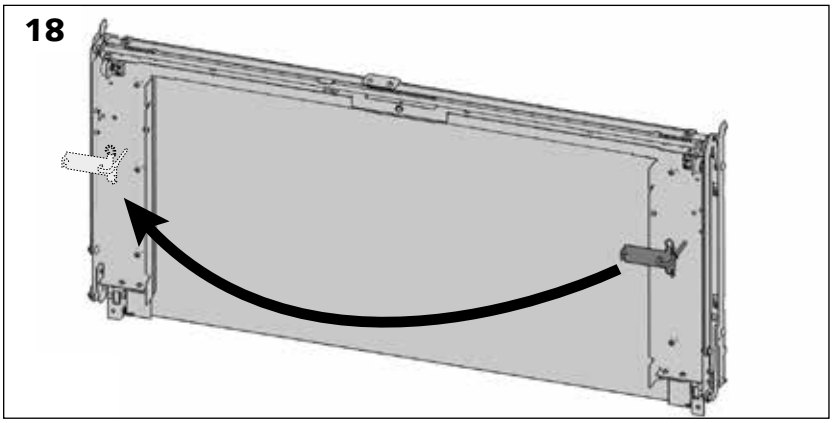


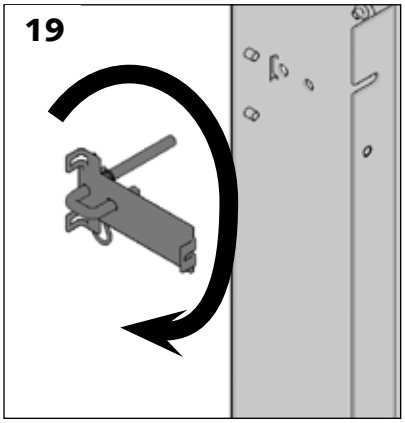

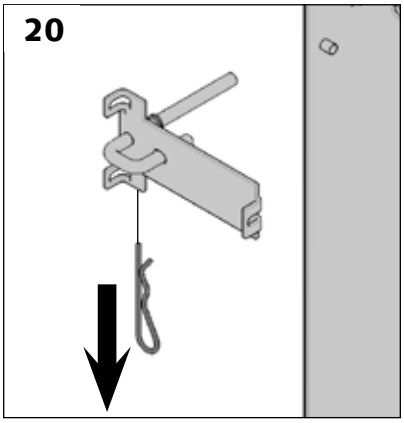


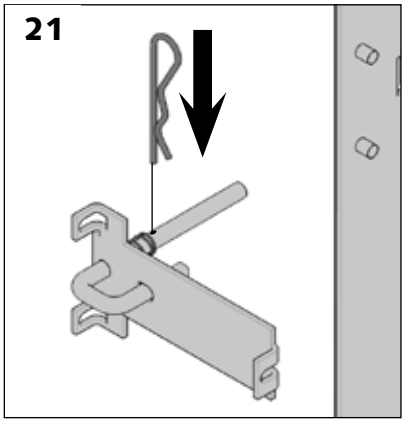


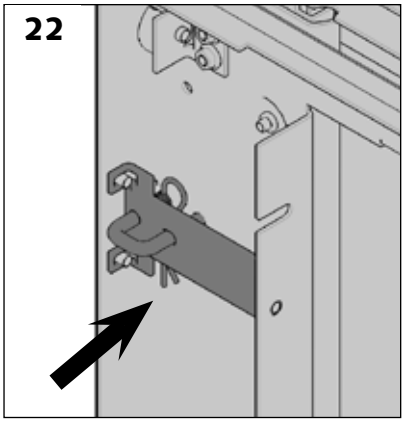


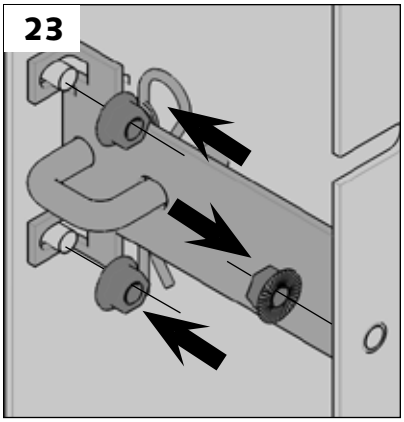



Warning!
The latch is needed for the door to work, so make sure you remember to fit it.

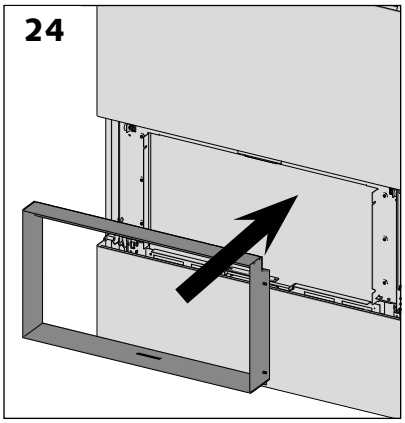


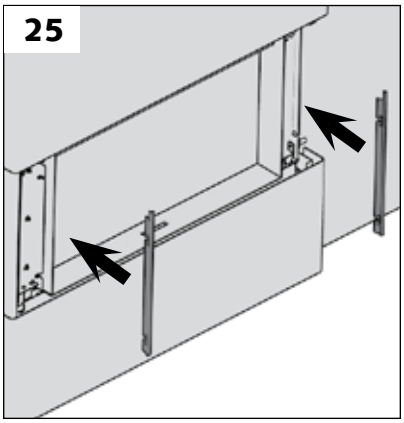


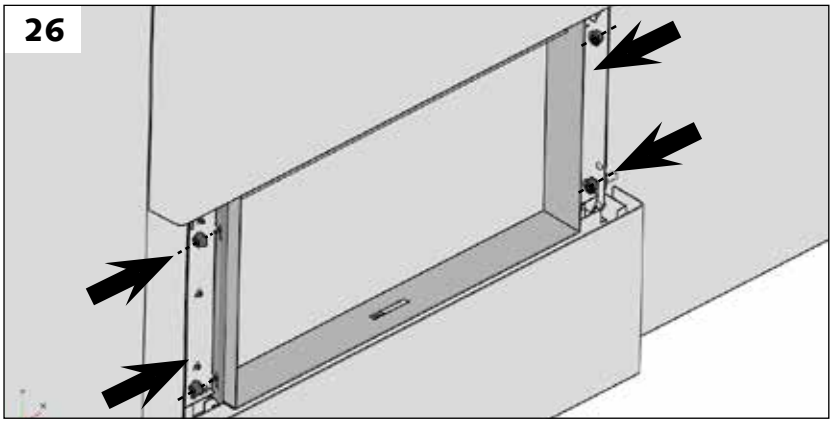


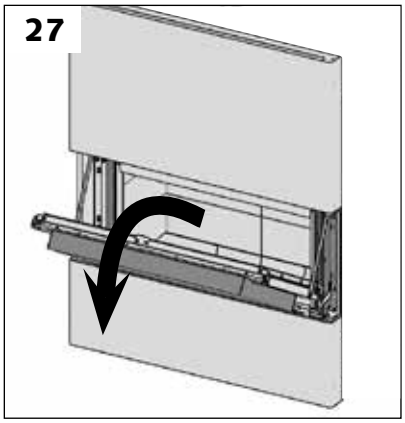


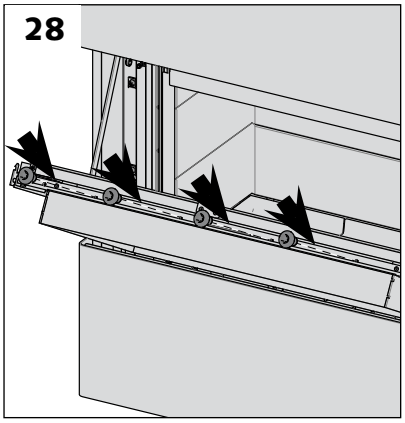


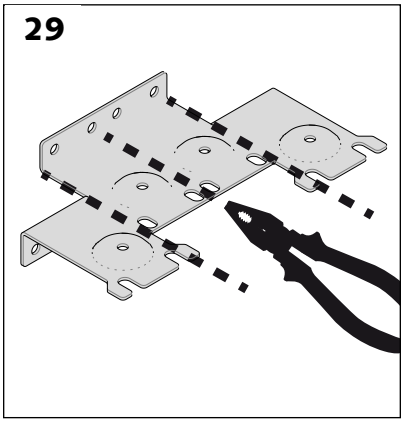


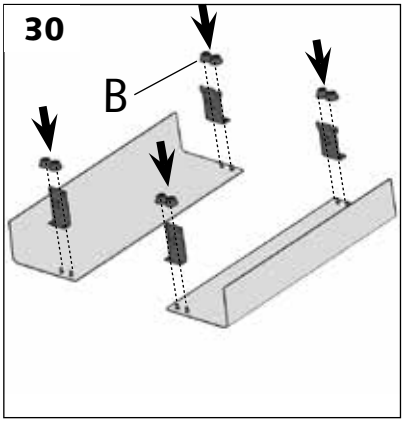


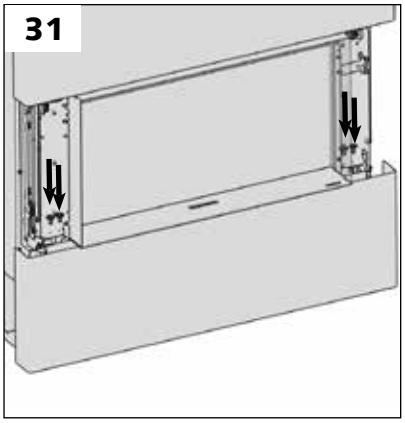

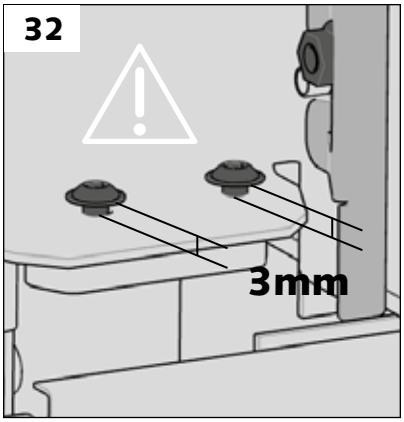


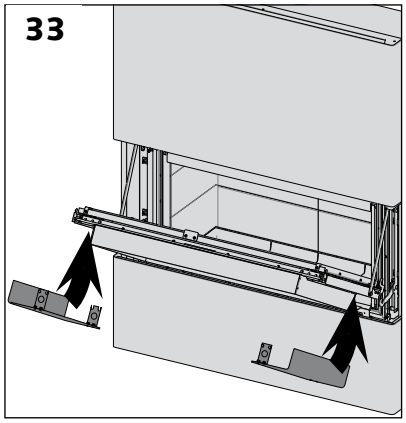


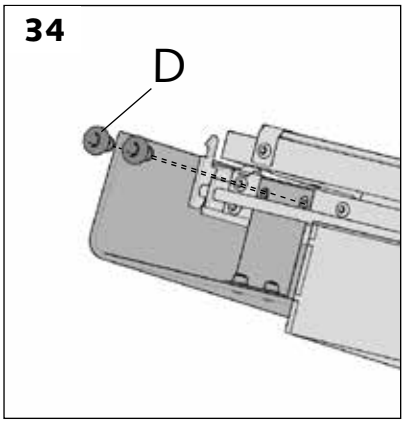

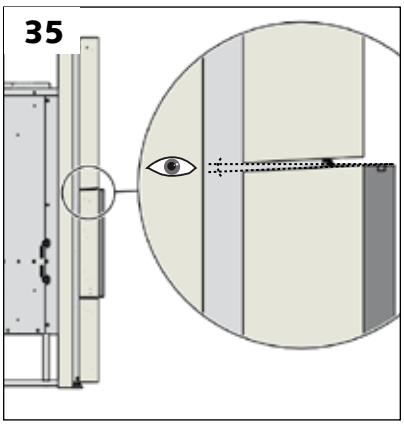



Warning!
The upper side of the finishing side panel is sloping [figure 32]!

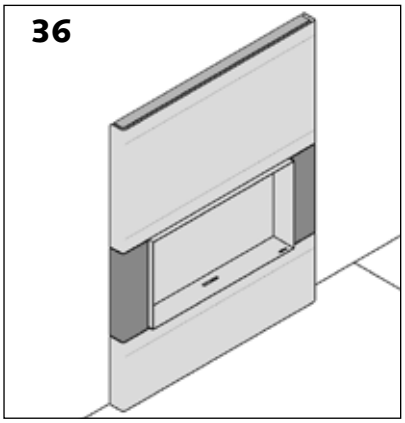

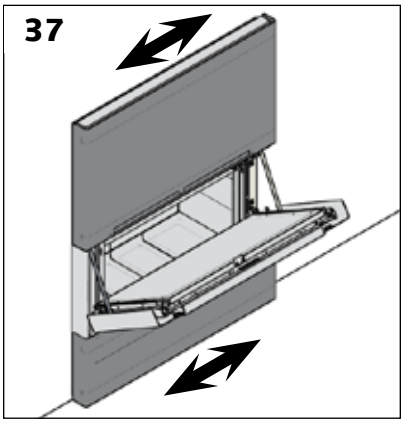



The screws are inserted into the oblong holes which means you can adjust the position of the finishing side panels in order to make sure they are aligned aesthetically. Similarly, the top trim panel and bottom trim panel can be slightly adjusted in width in order to facilitate the alignment of the different elements.

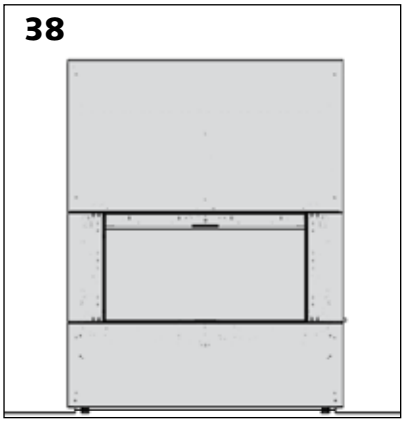

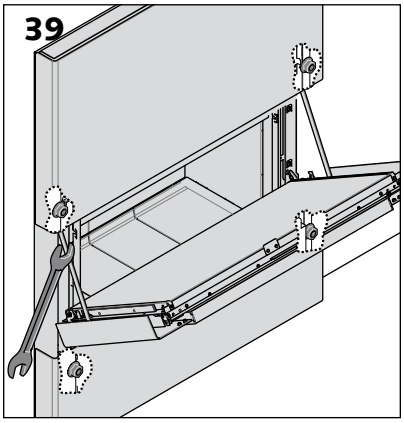


Once the parts are aligned, tighten the nuts of the top and bottom trim panels.
To tighten the panels in place, use the special tool provided with the cladding.

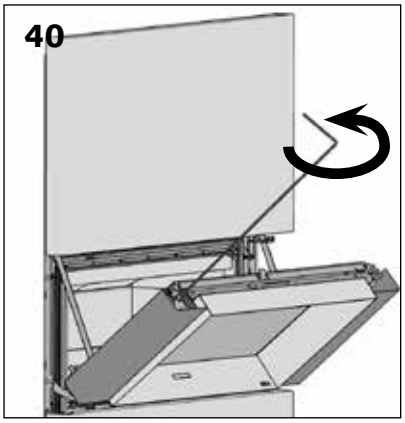


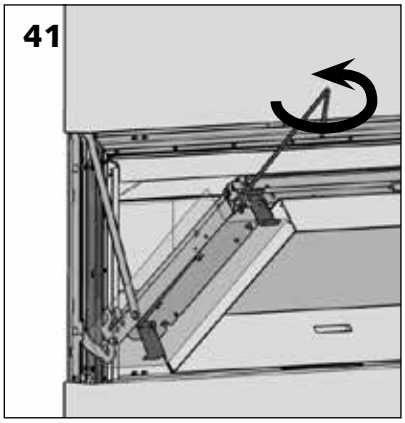



The grip on the small front panel is specific to this trim.
> Use a domed-head torx screw and the metal plate shown in figure 39.


The elements illustrated on figure 40 will not be helpful.

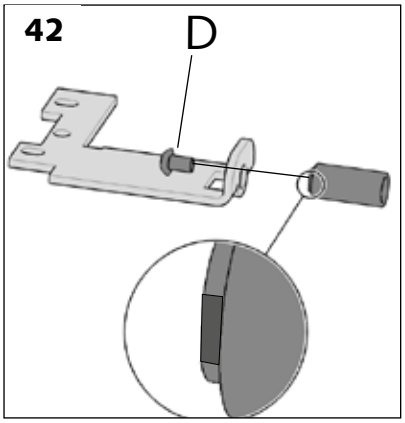

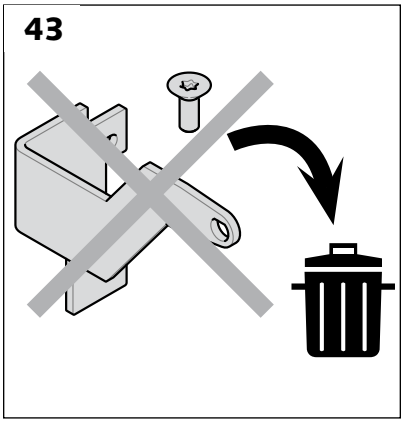

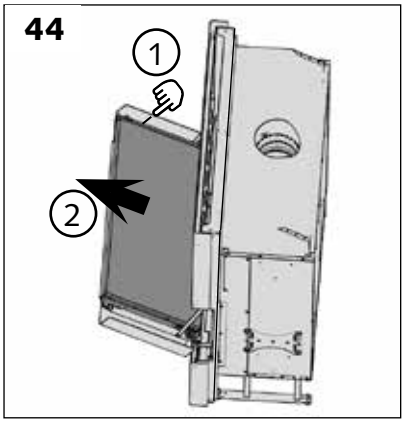

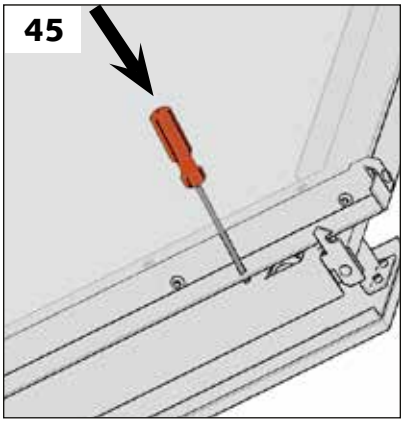

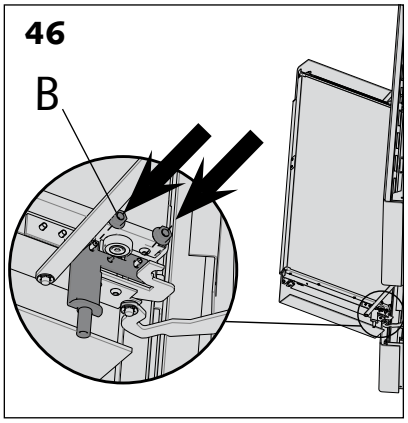

Please note

Wait for the stove to cool down completely before carrying out maintenance.

Clean with a dry cloth.

To clean Stûv finishing surfaces, use traditional, non-abrasive household detergent.

Stûv cladding with a rust finish must be treated with beeswax at least once a year.

Never use solvents (acetone, white spirit).

Marks left by indelible markers cannot be removed.

If necessary, Stûv can provide a spray canister for touch-up work.

Please contact your dealer about this.

CONTACTS

Stûv stoves are designed and manufactured in Belgium by:

Stûv sa
rue Jules Borbouse 4
B-5170 Bois-de-Villers (Belgium)
info@stuv.com – www.stuv.com

Importer for Finland

Ilkka Alatarvas OY
Pikkujärventie 4B
01680 Vantaa
T 400 872 858
www.takkamaailma.com

Importer for Sweden

Eldoform Sverige AB
Slipgatan 2 – 117 39 Stockholm
T 0707 883 53 – www.eldoform.se

Importer for Denmark

Stove APS
Aldershvilevej 84 – 2880 Bagsvaerd
T 51 33 10 93

Importer for Estonia

Tulering Kaminasalong Oü
Sopruse 145 – 13417 Tallinn
T +372 56 249 004 - www.tulering.ee

Installation instructions
Front panel DS for Stûv 22 [en]

01/19

Stûv reserves the right to make changes without prior notice.
These instructions have been produced with the greatest of care. However, we do not accept responsibility for any errors that may have been made.
Editor: Gérard Pitance – rue Jules Borbouse 4 – 5170 Bois-de-Villers – Belgium

[nl] [de] [it] [es] [pt] [cz] [en] [fr] >
This document is available in several languages :
Contact your distributor or visit www.stuv.com