
Installation instructions

For professional use

EN

www.stuv.com
You can also find us on:

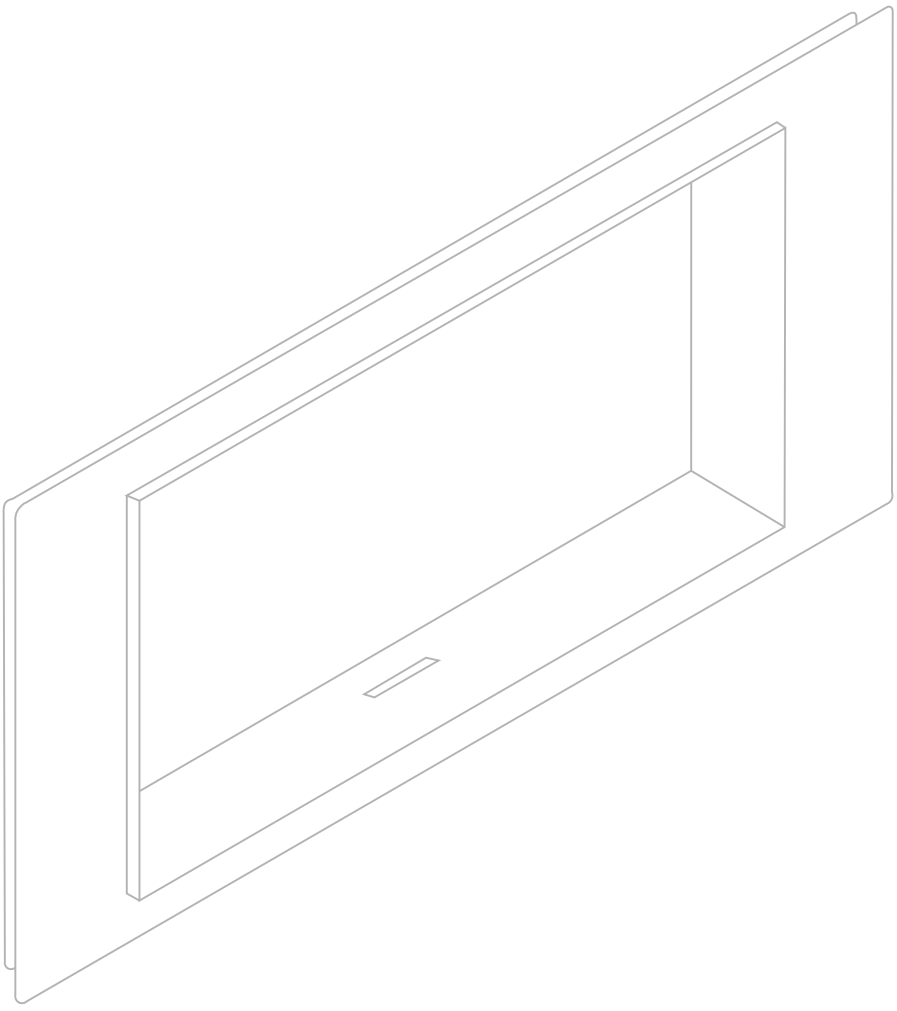

stûv 22

A4 Frame

February 2019

93109061

This cladding has been designed to ensure maximum convenience and safety. It has been manufactured with the greatest of care. If however you should find the slightest dissatisfaction with it, please contact your supplier.

We recommend that you read these instructions prior to installation.

Some configurations might have an impact on the sequence of operations to be performed.

Contents

GENERAL INFORMATION	**3**
Recommendations	3
Removing the door	4
A4 FRAME	**5**
A4 frame dimensions	5
Dimensions of the A4 frame	5
Installation constraint – Partition thickness	5
Creating the recess	6
Positioning templates	7
Position and dimensions of the cut in the panel	7
Nuts required	7
Installing the pre-frame	8
Refitting the door	8
Repositioning the door latch	9
Fitting the trim frame fixing feet	10
Installing the frame on the stove	11
Hooking the counterweight cables	11
MAINTENANCE	**12**
CONTACTS	**12**

Recommendations

Read the installation instructions and directions for use before installation and actual usage.

Also adhere to your stove's directions for use.

This Stûv cladding should be installed by a professional who has received the appropriate training from the Stûv manufacturer or one of its importers.

Once the cladding has been installed, hand these instructions over to the user.


Signing the delivery forms signifies that you accept the product and acknowledge that the merchandise is compliant with the merchandise ordered. It is therefore very important to check the integrity of the merchandise on delivery.


Adhere to the maintenance guidelines.

Any change made to the cladding may be dangerous. Please follow the specific instructions.

The installation of the stove, its accessories and the materials which surround it must comply with all regulations (local and national) and all standards (national and European) for the country of installation.

Removing the door

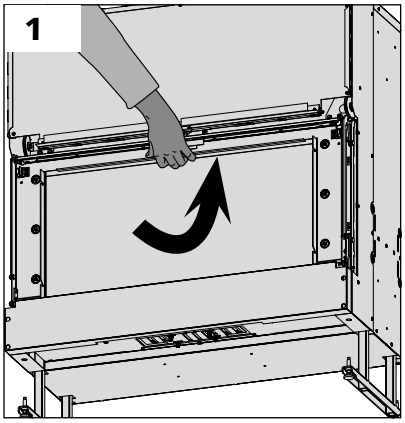


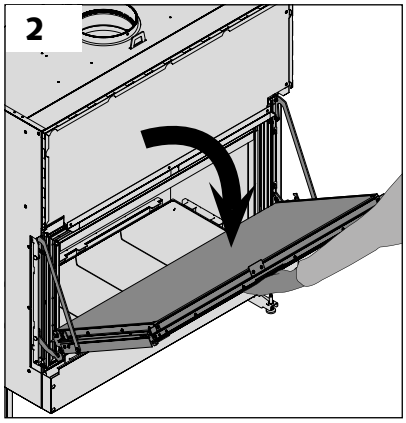



All Stûv 22 finishes are installed on the stove, just behind the door. The first stage is therefore the removal of the door.


To make it easy to move the Stûv 22, we recommend that the device's door is uncoupled.
By doing this, you will lighten the weight of the device and avoid any damage to the glass.


We recommend putting 2 screws in the strut of the door to make it easier to move [diagram 4].

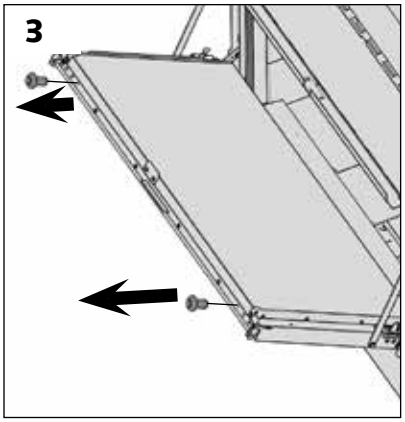

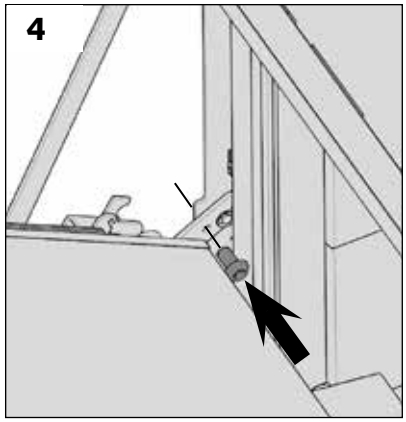

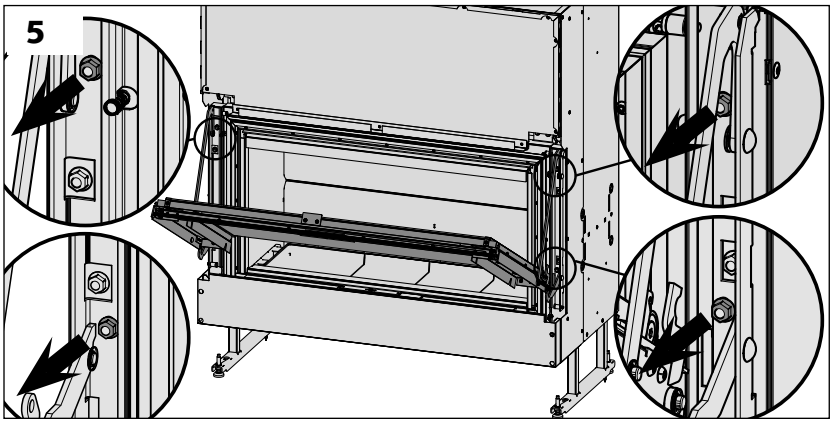


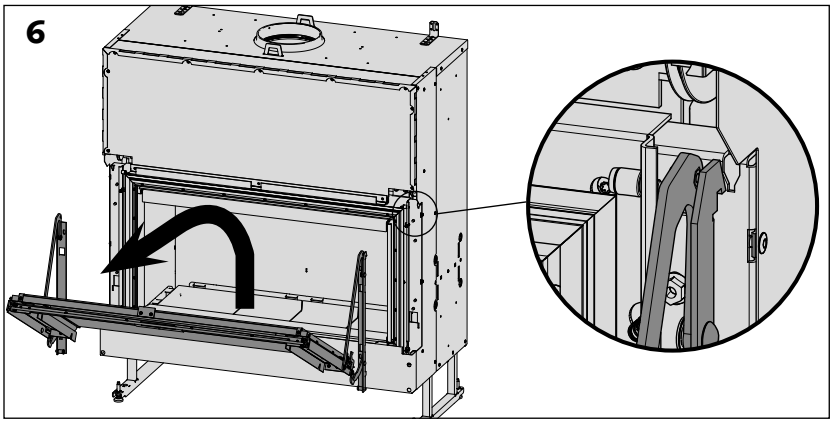

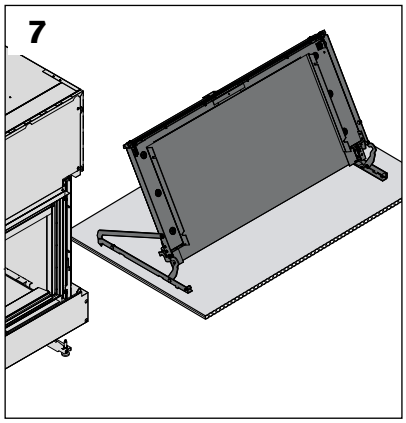

A4 FRAME


Dimensions of the A4 frame

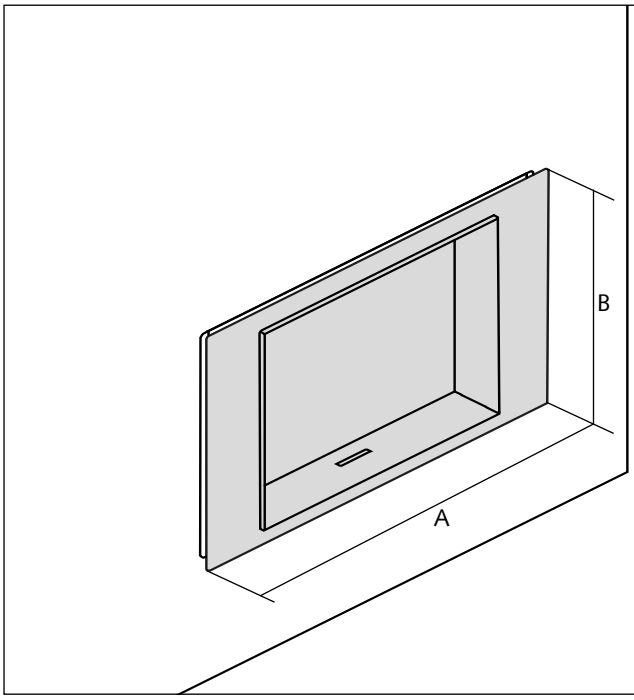


	22/70	22/90	22/110
A	780	980	1180
B	749	678	578

Installation constraint – Partition thickness

A4 frames can only be used with slim-line partitions.

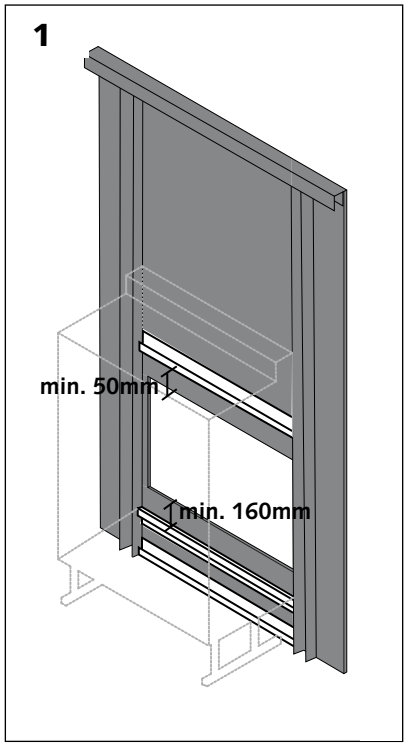

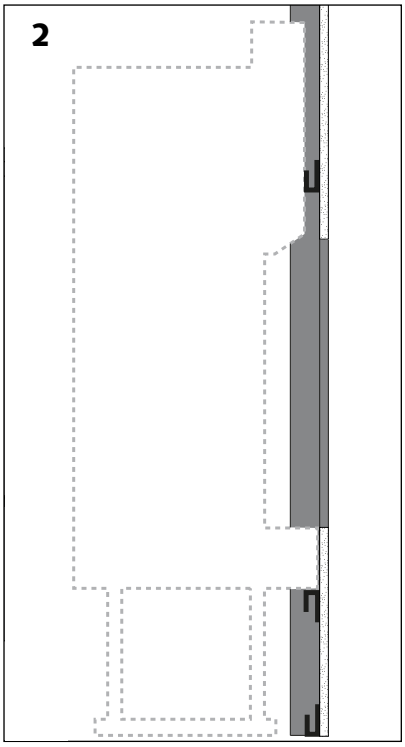


Using the A4 frame involves positioning the stove near the partition.

The partition will be made of metal sections and panels [diagrams 1&2]

Creating the recess


Dimension restrictions for creating the recess with the A4 frame

SF

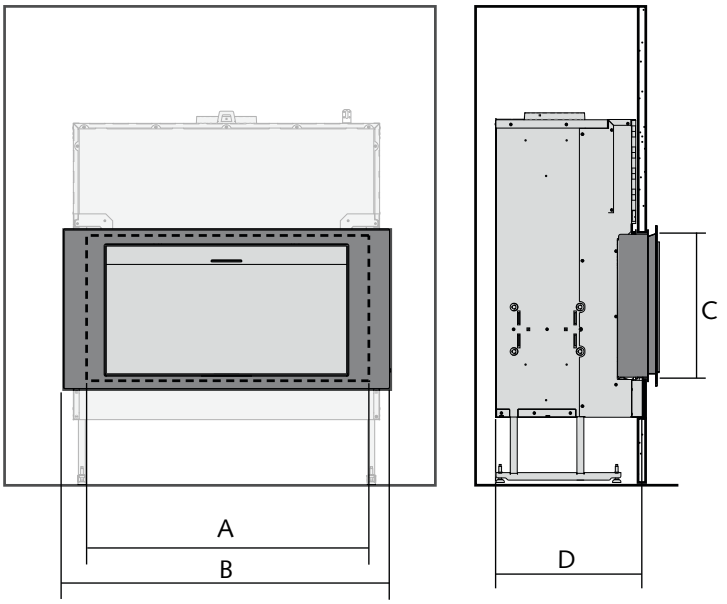


	A	B	C	D
Stûv 22/70	780	749	685	545
Stûv 22/90	980	678	615	545
Stûv 22/110	1180	578	515	545


DF

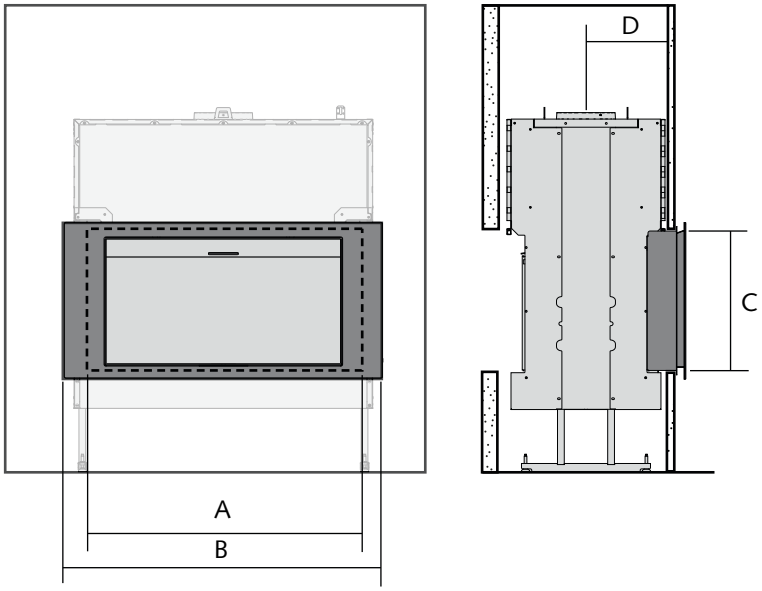

	A	B	C	D
Stûv 22/90DF	980	678	615	335
Stûv 22/110DF	1180	578	515	335

Positioning templates

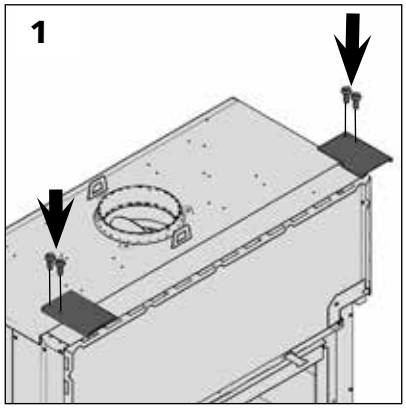

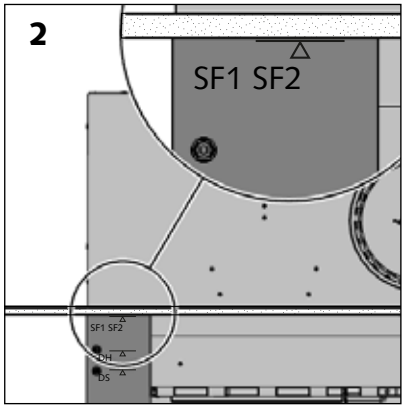


You can use the positioning templates to determine the position of the partition in relation to the stove depending on the cladding chosen.


> Put the templates on the stove with the Taptite screws provided [diagram 1].

> Line up the stove.

> **Position the stove so that the partition is lined up with the mark, with the triangle visible [diagram 2].**

Position and dimensions of the cut in the panel

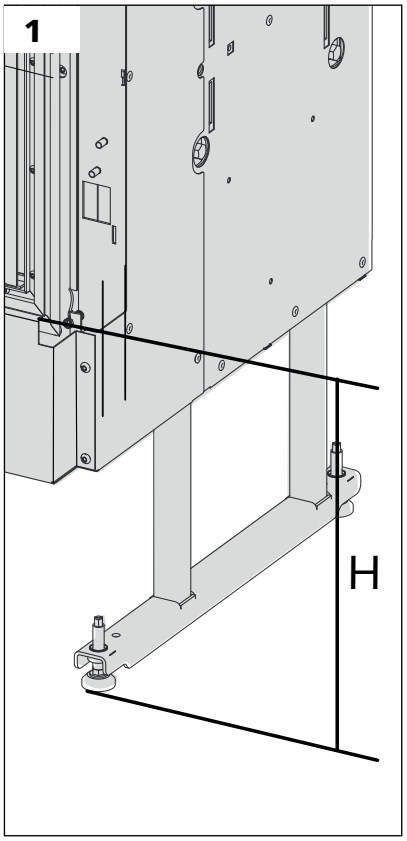


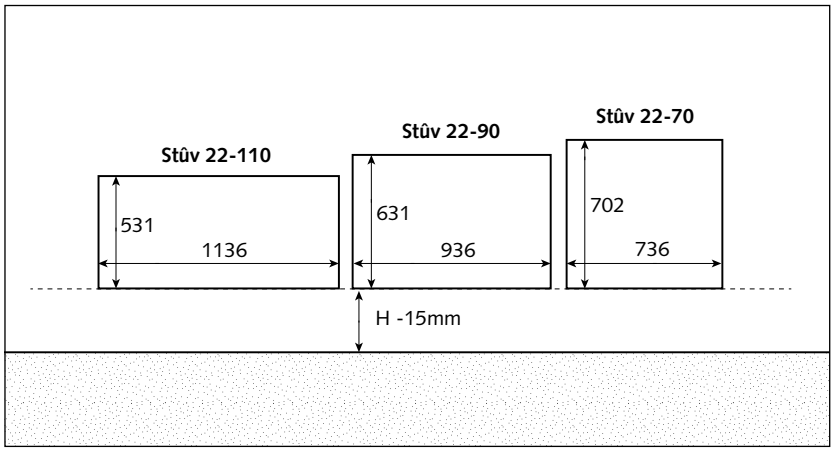

> Position the stove in relation to the partition using the template and set the desired height. Measure the distance "H" [diagram 1] and subtract 15mm from this value to find out the height of the bottom of the cut in relation to the floor.


> It is preferable to make the cut in a panel in a single piece.

Nuts required




B
X 4

Hexagonal nut M5
52113021



C*
X 4


Hexagonal nut M6
52113022
*Supplied with the stove



C
X 4


Hexagonal nut M6
52113022


Installing the pre-frame

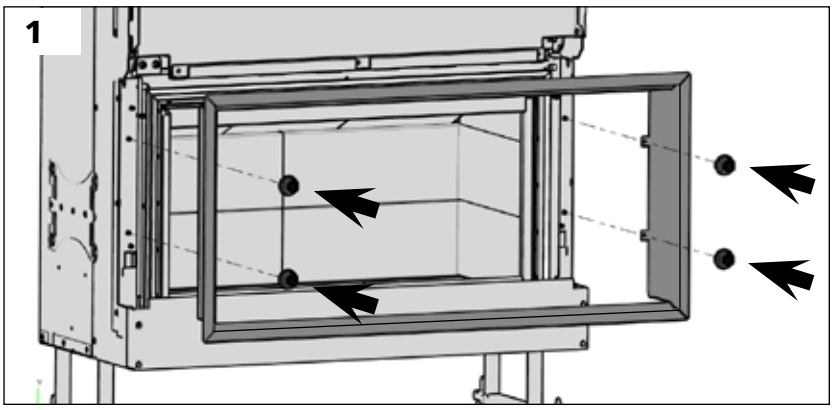



> Once the stove is in place and the partition installed, position the pre-frame.


Refitting the door

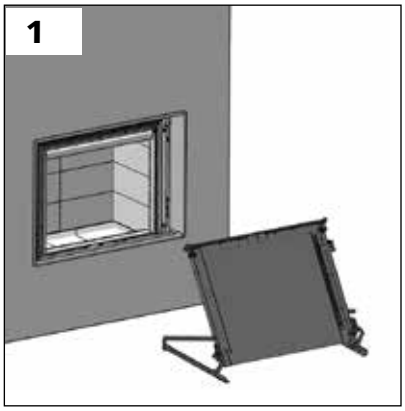


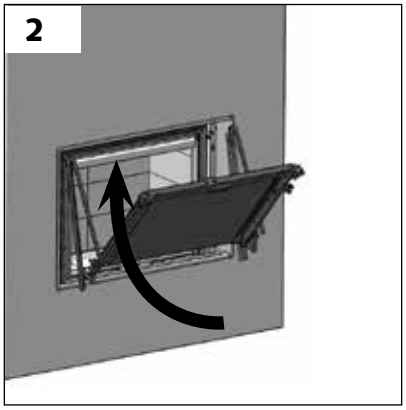


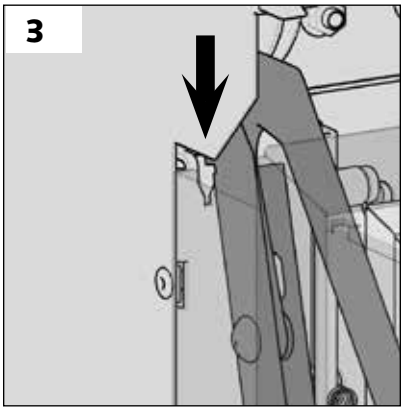

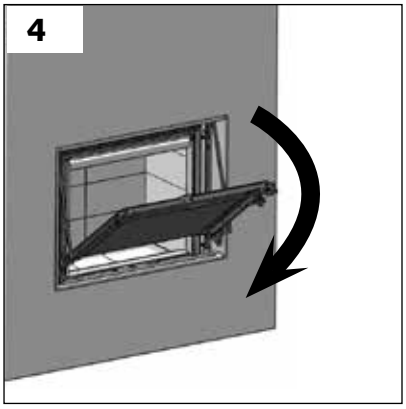


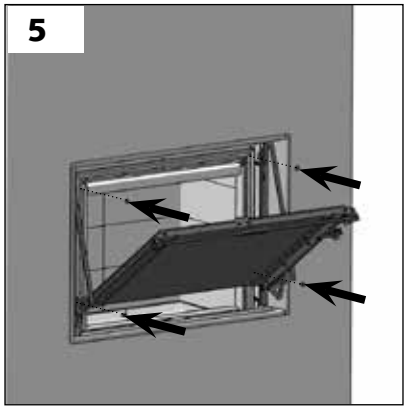


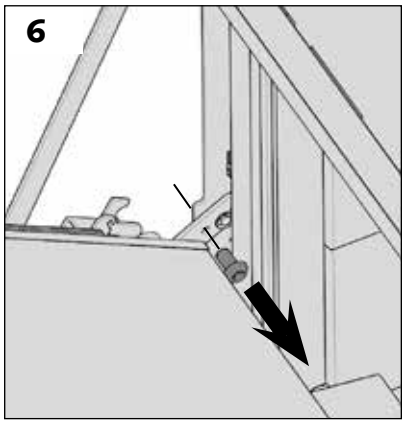


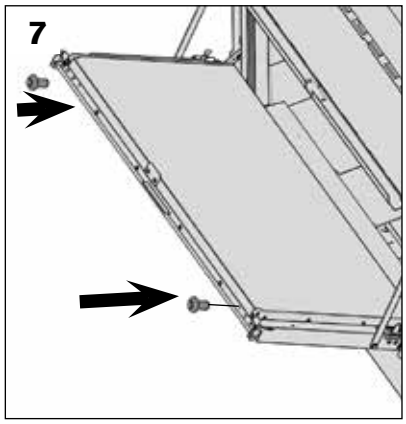



Repositioning the door latch

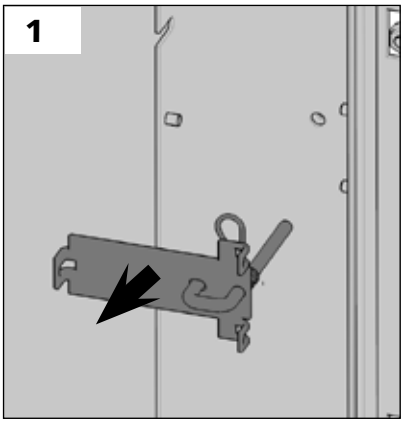


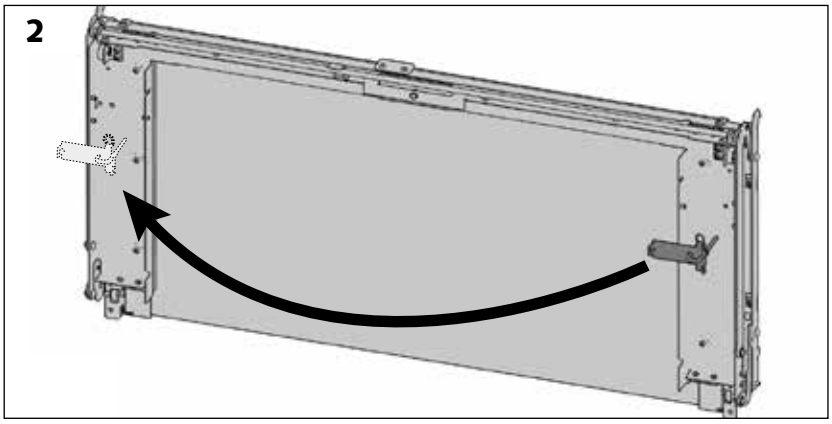


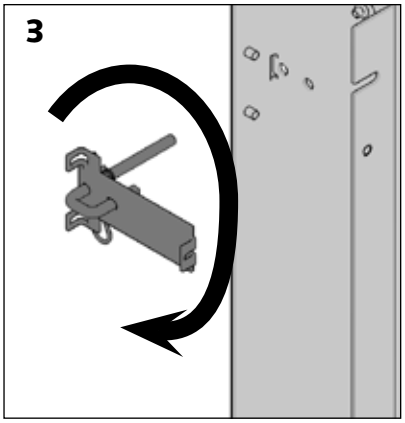

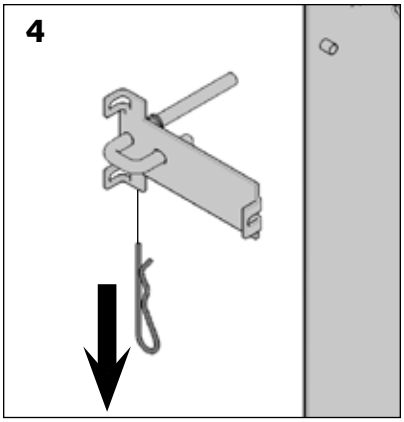

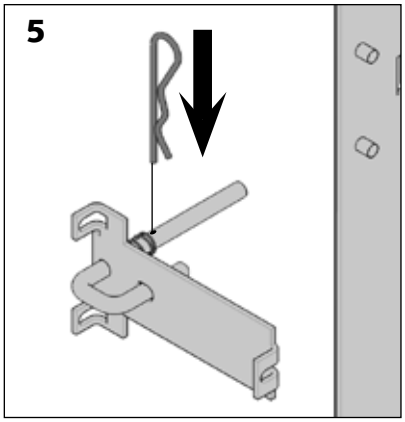

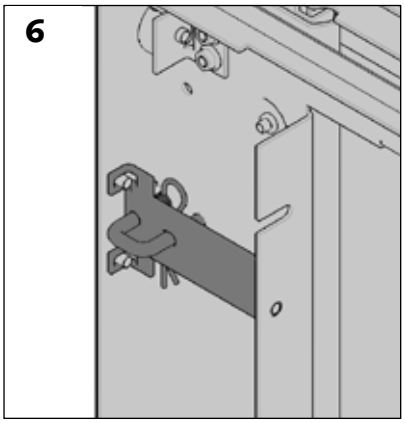


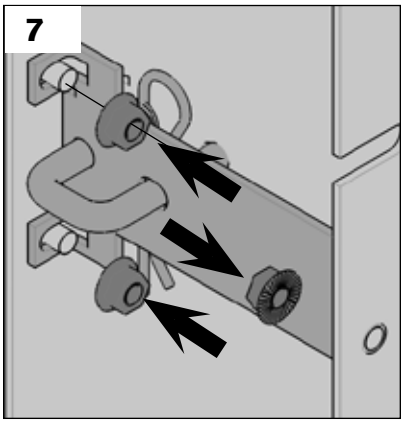



> Adjust the position of the door latch [diagrams 1-7].


Warning!
The latch is needed for the door to work, so make


sure you remember to fit it.

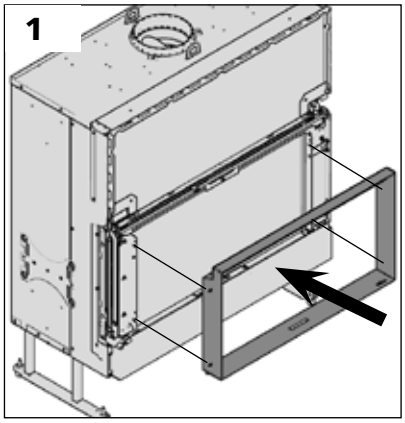


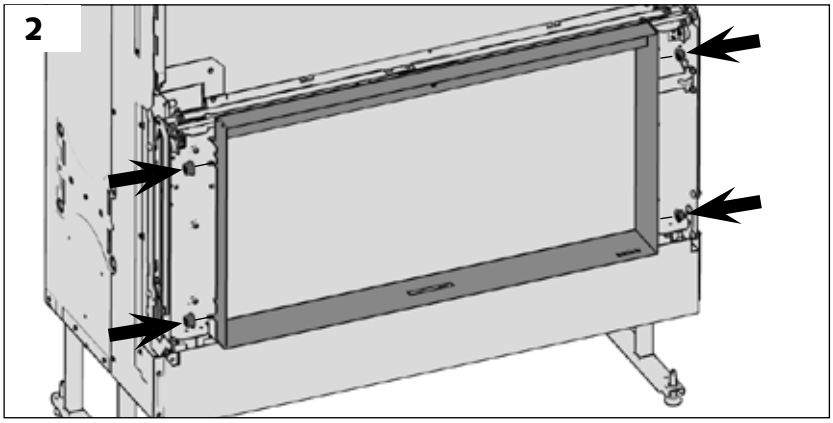

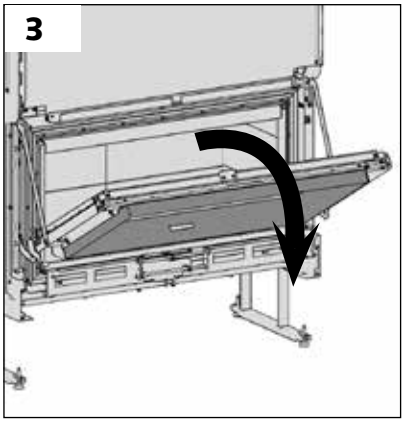


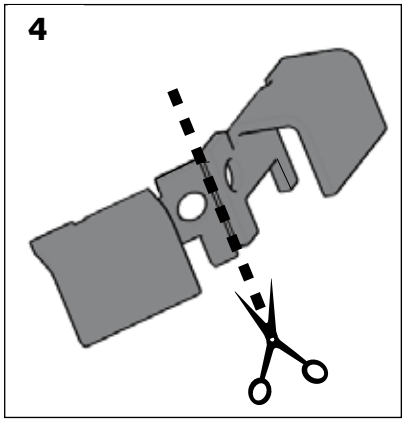


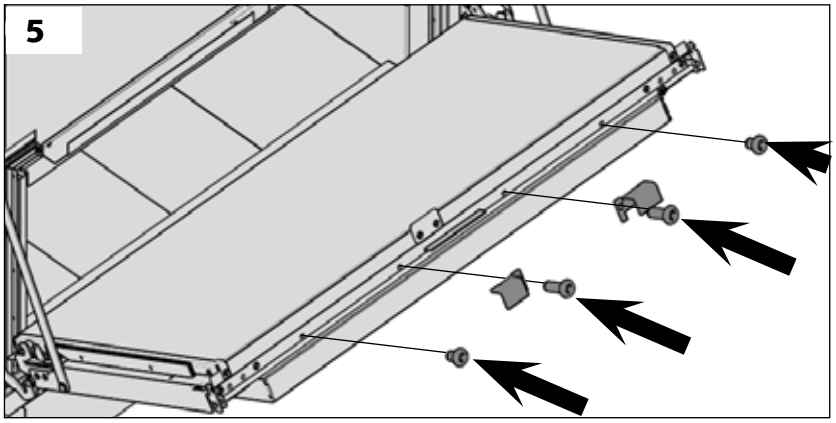

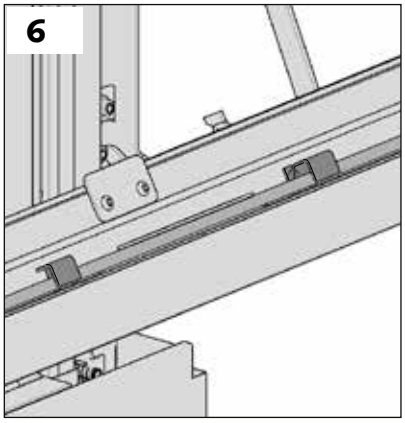

Fitting the trim frame fixing feet

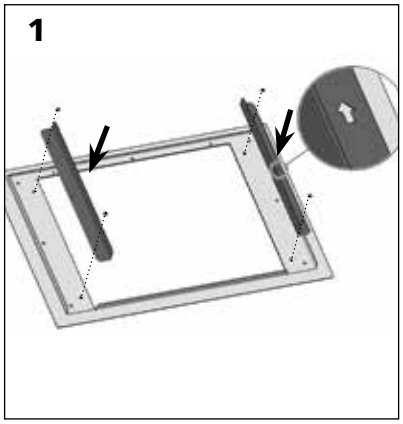

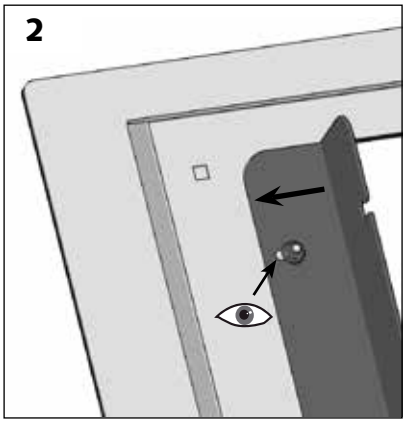



> Position the trim frame fixing feet [diagram 1].


> Do not tighten the screws completely so that the feet can be adjusted subsequently.


> Take the feet out as wide as possible in order not to scratch the door frame when put in place [diagram 2].


Installing the frame on the stove

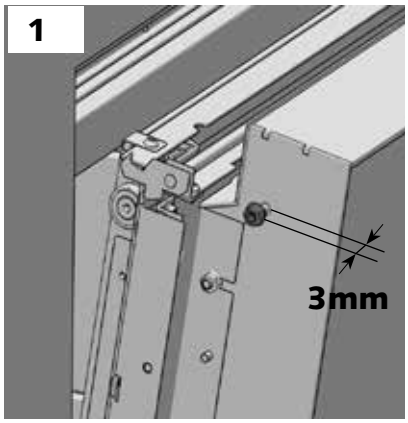


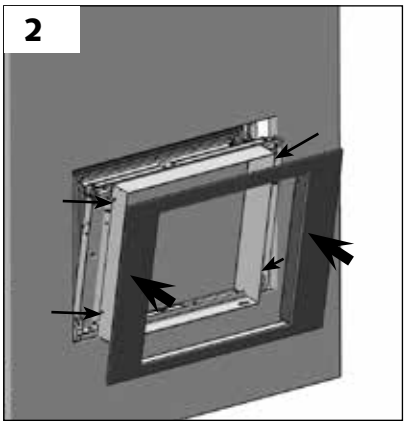

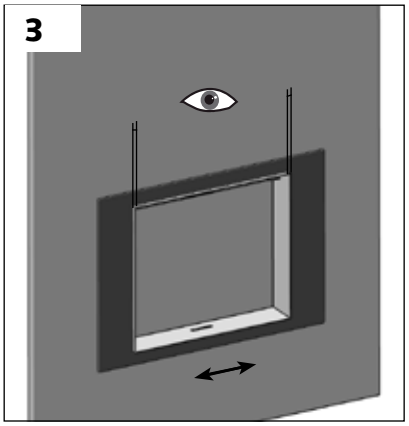

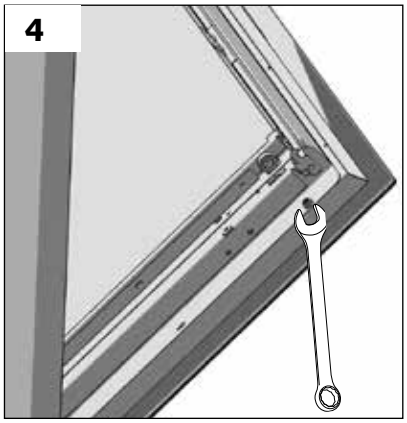

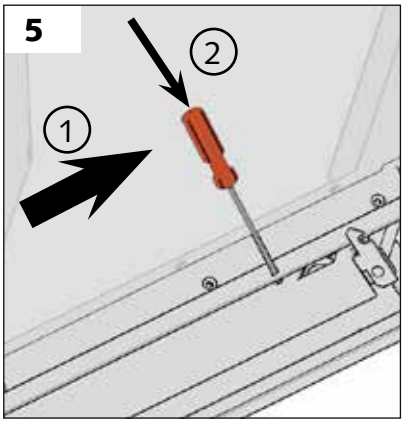

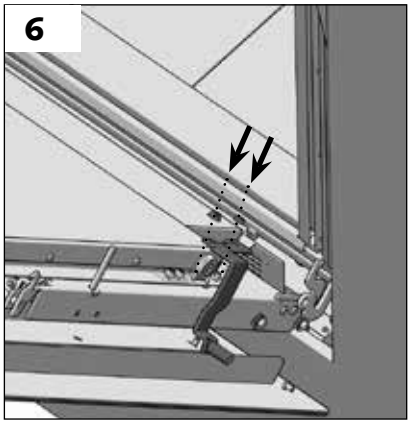


> Half-open the door and half-unscrew the 4 screws [diagram 3].

> Install the trim frame and tighten the 4 screws [diagram 4].

> Check the alignment of the door frame and trim frame [diagram 5] then tighten the fixing feet in their final position using a key [diagram 6].

> Lift the glass slightly and keep it in place using a screwdriver [diagram 5] to fit the handle [diagram 7].

Hooking the counterweight cables

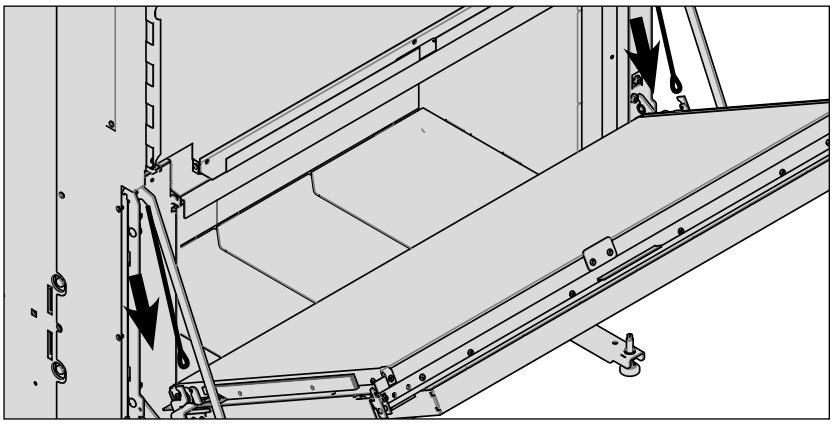

Warning!
Ensure that the cable is straight.
If the cable has a twist, the travel of the counterweight may be diverted.
If this is the case, there might be an unwanted noise.

MAINTENANCE

Please note

Wait for the stove to cool down completely before carrying out maintenance.

Clean with a dry cloth.

To clean Stûv finishing surfaces, use traditional, non-abrasive household detergent.

Stûv cladding with a rust finish must be treated with beeswax at least once a year.

Never use solvents (acetone, white spirit).

Marks left by indelible markers cannot be removed.

If necessary, Stûv can provide a spray canister for touch-up work.

Please contact your dealer about this.

CONTACTS

Stûv stoves are designed and manufactured in Belgium by:

Stûv sa
rue Jules Borbouse 4
B-5170 Bois-de-Villers (Belgium)
info@stuv.com – www.stuv.com

Importer for Finland

Ilkka Alatarvas OY
Pikkujärventie 4B
01680 Vantaa
T 400 872 858
www.takkamaailma.com

Importer for Sweden

Eldoform Sverige AB
Slipgatan 2 – 117 39 Stockholm
T 0707 883 53 – www.eldoform.se

Importer for Denmark

Stove APS
Aldershvilevej 84 – 2880 Bagsvaerd
T 51 33 10 93

Importer for Estonia

Tulering Kaminasalong Oü
Sopruse 145 – 13417 Tallinn
T +372 56 249 004 - www.tulering.ee

installation instructions [en]

A4 frame for Stûv 22

printed on 100% recycled paper

Stûv reserves the right to make changes without prior notice.
These instructions have been produced with the greatest of care. However, we do not accept responsibility for any errors that may have been made.
Editor: Gérard Pitance – rue Jules Borbouse 4 – 5170 Bois-de-Villers – Belgium

[nl] [de] [it] [es] [pt] [cz] [en] [fr] >
This document is available in several languages :
Contact your distributor or visit www.stuv.com